

BOA SPOT 180

14ch			
1	0	255	Pan
2	0	255	Pan fine
3	0	255	Tilt
4	0	255	Tilt fine
5	0	255	Pan/tilt speed (fast to slow)
6	0	255	Dimmer
7			Strobe
	0	0	No strobe
	1	255	Strobe slow-fast
8			Colour
	0	7	White
	8	15	Red
	16	23	Green
	24	31	Blue
	32	39	Yellow
	40	47	Cyan
	48	55	Orange
	56	63	Magenta
	64	71	White / Red
	72	79	Red / Green
	80	87	Green / Blue
	88	96	Blue / Yellow
	97	104	Yellow / Cyan
	105	111	Cyan / Orange
	112	119	Orange / Magenta
	120	127	Magenta / White
	128	191	Forwards color jump (fast to slow)
	192	255	Backwards color jump (slow to fast)
9			Gobo
	0	15	Open
	16	31	Gobo 1
	32	47	Gobo 2
	48	63	Gobo 3
	64	79	Gobo 4
	80	95	Gobo 5
	96	111	Gobo 6
	112	127	Gobo 7
	128	191	Backwards gobo jump (fast to slow)
	192	255	Forwards gobo jump (slow to fast)
10			Prism
	0	7	Open
	8	127	Prism
	128	255	Prism rotation (slow to fast)
11	0	255	Focus

12			Ring light
	0	7	No function
	8	24	Red
	25	41	Green
	42	58	Blue
	59	75	Yellow
	76	91	Magenta
	92	109	Cyan
	110	120	White
	121	135	Effect 1 (speed slow to fast)
	136	150	Effect 2 (speed slow to fast)
	151	165	Effect 3 (speed slow to fast)
	166	180	Effect 4 (speed slow to fast)
	181	195	Effect 5 (speed slow to fast)
	196	210	Effect 6 (speed slow to fast)
	211	225	Effect 7 (speed slow to fast)
	226	240	Effect 8 (speed slow to fast)
	241	255	Effect 9 (speed slow to fast)
13			Mode
	0	49	No function
	50	149	Auto program
	150	255	Sound mode
14			Reset
	0	200	Safe
	201	255	Reset