

## BOA BEAM 180

|      |     |     |                                      |
|------|-----|-----|--------------------------------------|
| 14ch |     |     |                                      |
| 1    | 0   | 255 | <b>Pan</b>                           |
| 2    | 0   | 255 | <b>Pan fine</b>                      |
| 3    | 0   | 255 | <b>Tilt</b>                          |
| 4    | 0   | 255 | <b>Tilt fine</b>                     |
| 5    | 0   | 255 | <b>Pan/tilt speed (fast to slow)</b> |
| 6    | 0   | 255 | <b>Dimmer</b>                        |
| 7    |     |     | <b>Strobe</b>                        |
|      | 0   | 0   | No strobe                            |
|      | 1   | 255 | Strobe slow-fast                     |
| 8    |     |     | <b>Colour</b>                        |
|      | 0   | 10  | White                                |
|      | 11  | 21  | Red                                  |
|      | 22  | 32  | Yellow                               |
|      | 33  | 43  | Green                                |
|      | 44  | 54  | Warm white                           |
|      | 55  | 65  | Blue                                 |
|      | 66  | 76  | Magetna                              |
|      | 77  | 87  | Light green                          |
|      | 88  | 98  | Cold white                           |
|      | 99  | 109 | Pink                                 |
|      | 110 | 119 | Cyan                                 |
|      | 120 | 127 | Orange                               |
|      | 128 | 191 | Forwards color jump (fast to slow)   |
|      | 192 | 255 | Backwards color jump (slow to fast)  |
| 9    |     |     | <b>Gobo</b>                          |
|      | 0   | 15  | Open                                 |
|      | 16  | 23  | Gobo 1                               |
|      | 24  | 31  | Gobo 2                               |
|      | 32  | 39  | Gobo 3                               |
|      | 40  | 47  | Gobo 4                               |
|      | 48  | 55  | Gobo 5                               |
|      | 56  | 63  | Gobo 6                               |
|      | 64  | 71  | Gobo 7                               |
|      | 72  | 79  | Gobo 8                               |
|      | 80  | 87  | Gobo 9                               |
|      | 88  | 95  | Gobo 10                              |
|      | 96  | 103 | Gobo 11                              |
|      | 104 | 111 | Gobo 12                              |
|      | 112 | 119 | Gobo 13                              |
|      | 120 | 127 | Gobo 14                              |
|      | 128 | 191 | Backwards gobo jump (fast to slow)   |
|      | 192 | 255 | Forwards gobo jump (slow to fast)    |
| 10   |     |     | <b>Prism</b>                         |
|      | 0   | 7   | Open                                 |

|    |     |     |                                |
|----|-----|-----|--------------------------------|
| 10 | 8   | 127 | Prism                          |
|    | 128 | 255 | Prism rotation (slow to fast)  |
| 11 | 0   | 255 | <b>Focus</b>                   |
| 12 |     |     | <b>Frost / colorful effect</b> |
|    | 0   | 7   | Open                           |
|    | 8   | 127 | Frost                          |
|    | 128 | 255 | Colorful effect                |
| 13 |     |     | <b>Mode</b>                    |
|    | 0   | 49  | No function                    |
|    | 50  | 149 | Auto program                   |
|    | 150 | 255 | Sound mode                     |
| 14 |     |     | <b>Reset</b>                   |
|    | 0   | 240 | Safe                           |
|    | 241 | 255 | Reset                          |